


Before you start measuring...

Make sure your recess is deep enough to fit the blind into, bearing in mind obstructions such as handles or vents.

Each blind has a different head rail depth. Check the table below:

Blind Type	Head Rail Depth
25mm Wooden Venetian Blind	55mm
35mm Wooden Venetian Blind	65mm
50mm Wooden Venetian Blind	70mm
Roller Blind	50mm top fix / 70mm face fix
Vertical Blind	45mm

What you will need...

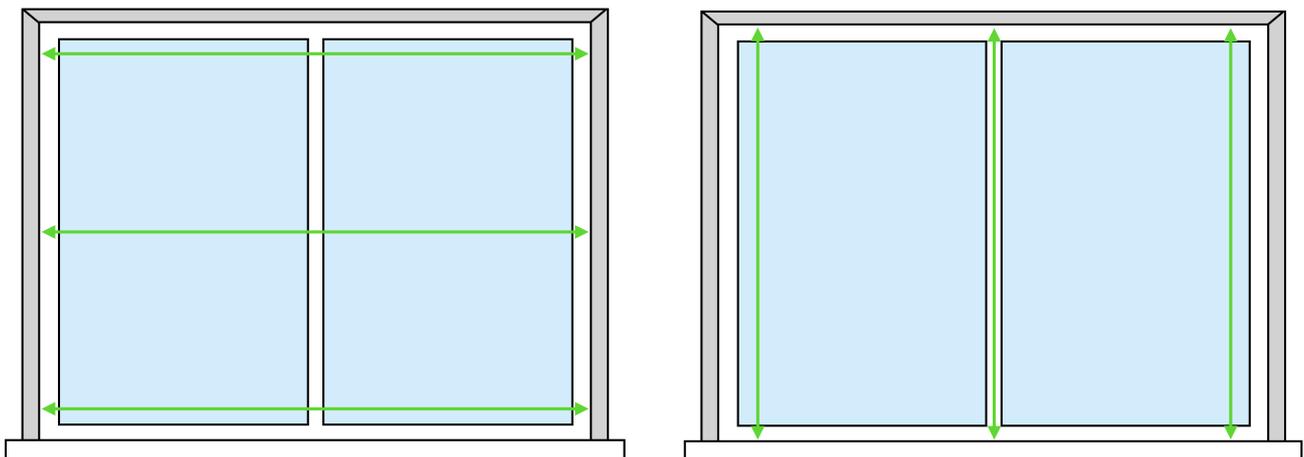

Measure in 3 places across the width of the window - The smallest measurement will be your width. Then measure in 3 places down the height of your window - The smallest measurement will be your drop.

If you have tiles part way up your recess, measure between the tiles and use that measurement as the width.

No need to make any reductions, as we will make the appropriate reductions required to ensure your blinds fit perfectly.