


What you will need...

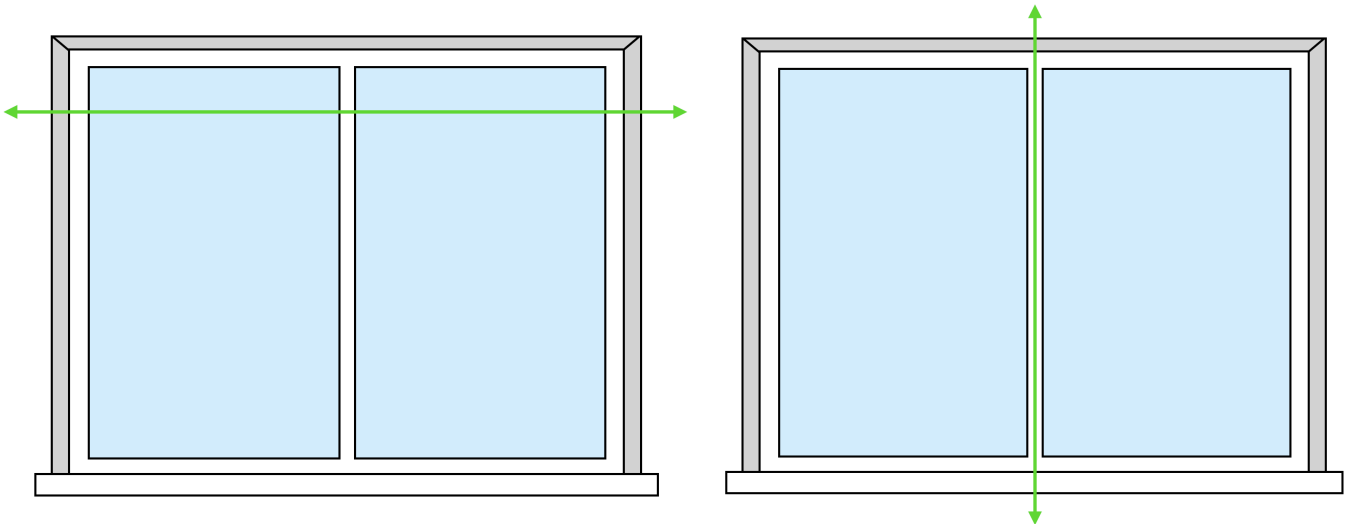

Measure across the width and height of the window where you want your blind to start and end.

We recommend to allow your blind to overlap at least 35mm on each side.

Note that exact measurements are not just the fabric/material size, but also include the head rail fitting.

Tip for Roller Blinds

The overall width of a roller blind, including brackets, is 35mm wider than the width of the fabric - so you can choose whether to measure for full bracket to bracket width, or for the width you would like the fabric to cover

