

Before you start measuring...

Make sure you are measuring for the correct blind.

Each blind has a different head rail depth. Please select the correct head rail depth below. If you have vents or handles, measure how far these protrude from the window frame and add this measurement to the head rail depth.

Blind Type

25mm Wooden Venetian Blind

35mm Wooden Venetian Blind

50mm Wooden Venetian Blind

Roller Blind

Vertical Blind

Head Rail Depth

55mm

65mm

70mm

50mm top fix / 70mm face fix


45mm

What you'll need...




1

Using two pieces of A5 paper, place them side by side at the required head rail measurement

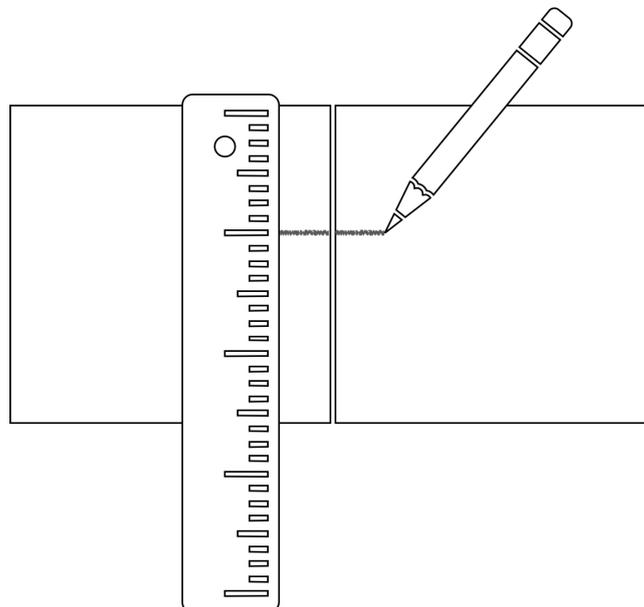


2

Slide the two pieces of paper toward each other along the window sill until the two marks meet up

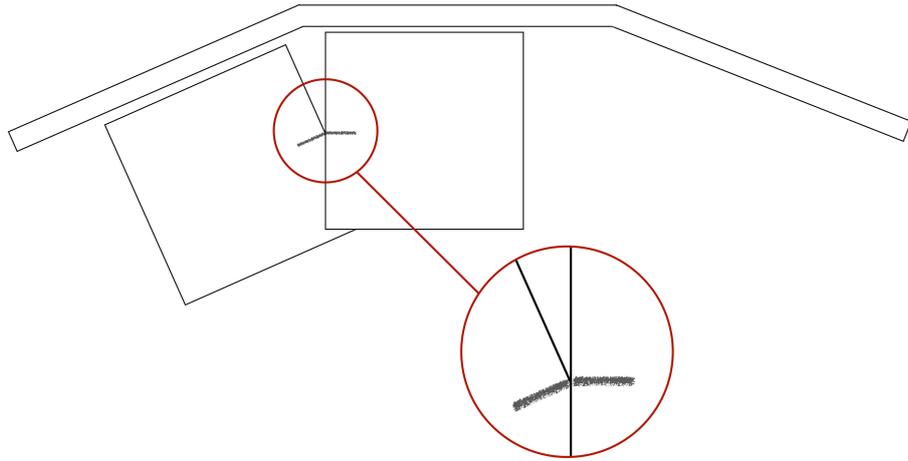


3

Using a pencil, make a mark on the window sill where the edge of the paper meets the window frame

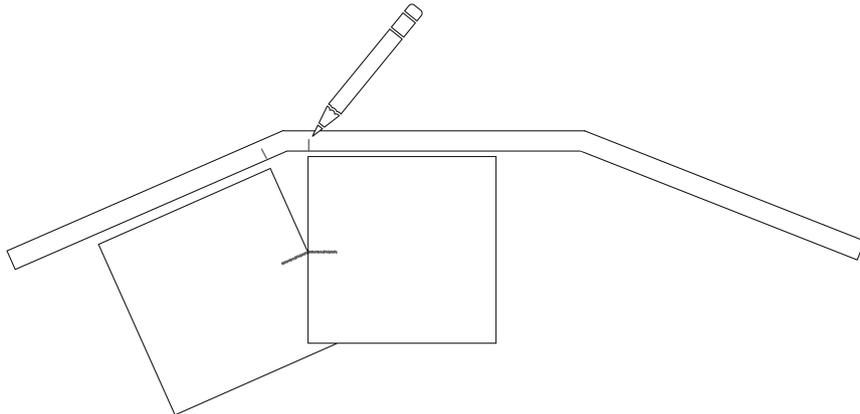

4

Measure from one mark to the next to determine the width of the blind you need to order.

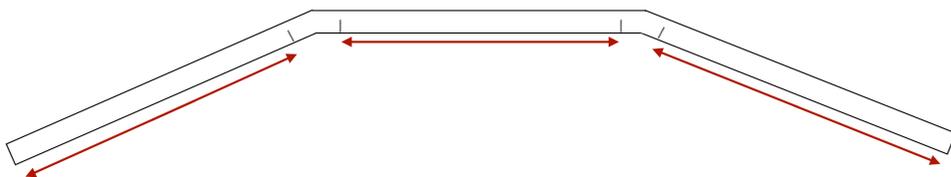

5

Measure the drop from where the top of the blind will sit, down to where you want the blind to end, typically the window sill.

Order your blind as "blind size"